


Hardware Validation

1. Access the **Main** tab.
2. Click on **Serial Console**.
3. Set the baud rate to **115200**.
4. Send a character via the serial terminal.
 - If the character matches the predefined value (8'h61), the LED should toggle.
 - The same character will also be sent back through the TX pin (echo).

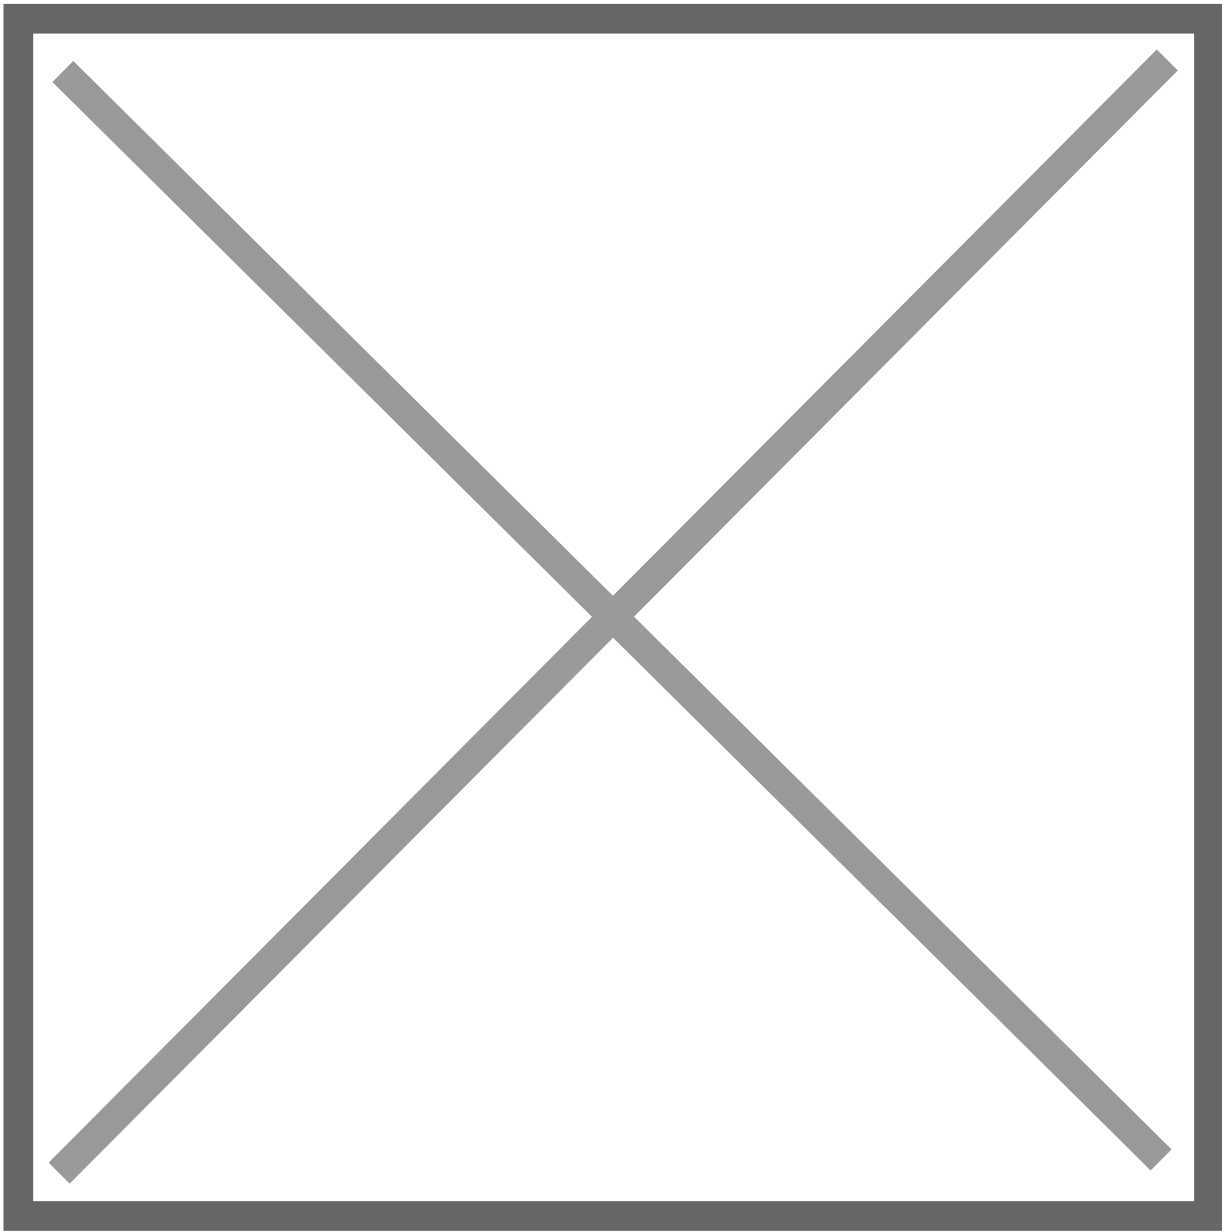



Revision #1

Created 1 May 2025 18:29:51 by Caroline

Updated 1 May 2025 18:31:40 by Caroline